

Replacing a Plug and Chain

It's easy to replace a broken sink chain with a new plug and chain. Watch our online video and follow these instructions.

www.togetherhousing.co.uk

Tenant Responsible Repairs

Together Housing will carry out repairs and maintenance to the structure of your home, including the outside and shared parts of your home, which are caused by normal wear and tear. Tenants are responsible for doing some simple repairs and home maintenance. A full list of tenant responsible repairs is available on our website.

Safety!

The Royal Society for the Prevention of Accidents advises:

“Be realistic and don't tackle a job unless you really have the ability. A competent, qualified person should always carry out gas and electrical renewal or repair work.

Keep any tools clean and in good repair, and give each one a quick check over before you use it. Always plan ahead - accidents happen more easily if you are unprepared and rush.”

Further DIY safety advice is available at www.rospa.com

All rubbish should be disposed of responsibly and recycled where possible.



Replacing a Plug and Chain

Tools you will need:

New plug and chain, pliers

1. First, make sure you have the right size plug. Sinks and baths in Together Housing properties have 'standard' sized plug holes.
2. Fit one end of the chain to the plug using the pliers. Make sure it's tight.
3. Attach the other end of the chain to the sink using the pliers. Make sure it's secure.

Now the plug is ready to use.